



Porsche Macan Slider installation

Disclaimer: This installation guide is provided for informational purposes only. We are not responsible for any damage or injuries resulting from improper installation or use of this product. It is essential to follow all safety guidelines and maintain safe installation habits. We strongly recommend that you consult with or hire a professional installer to ensure proper installation. Use this guide at your own risk.

-6x Small L bolts (cut 2 1" off)

-2x M12 nutserts large

-2x M12x30 Hex bolts

-2x M12 washers


- Remove both left and right underbody plastic covers. You will not reuse these.
- Installation hardware pack you will see Special L bolts along with paper circles. You will install the paper over the stud to keep the L bolt from falling into the frame.







Insert the L bolt into the pockets of the front and rear.

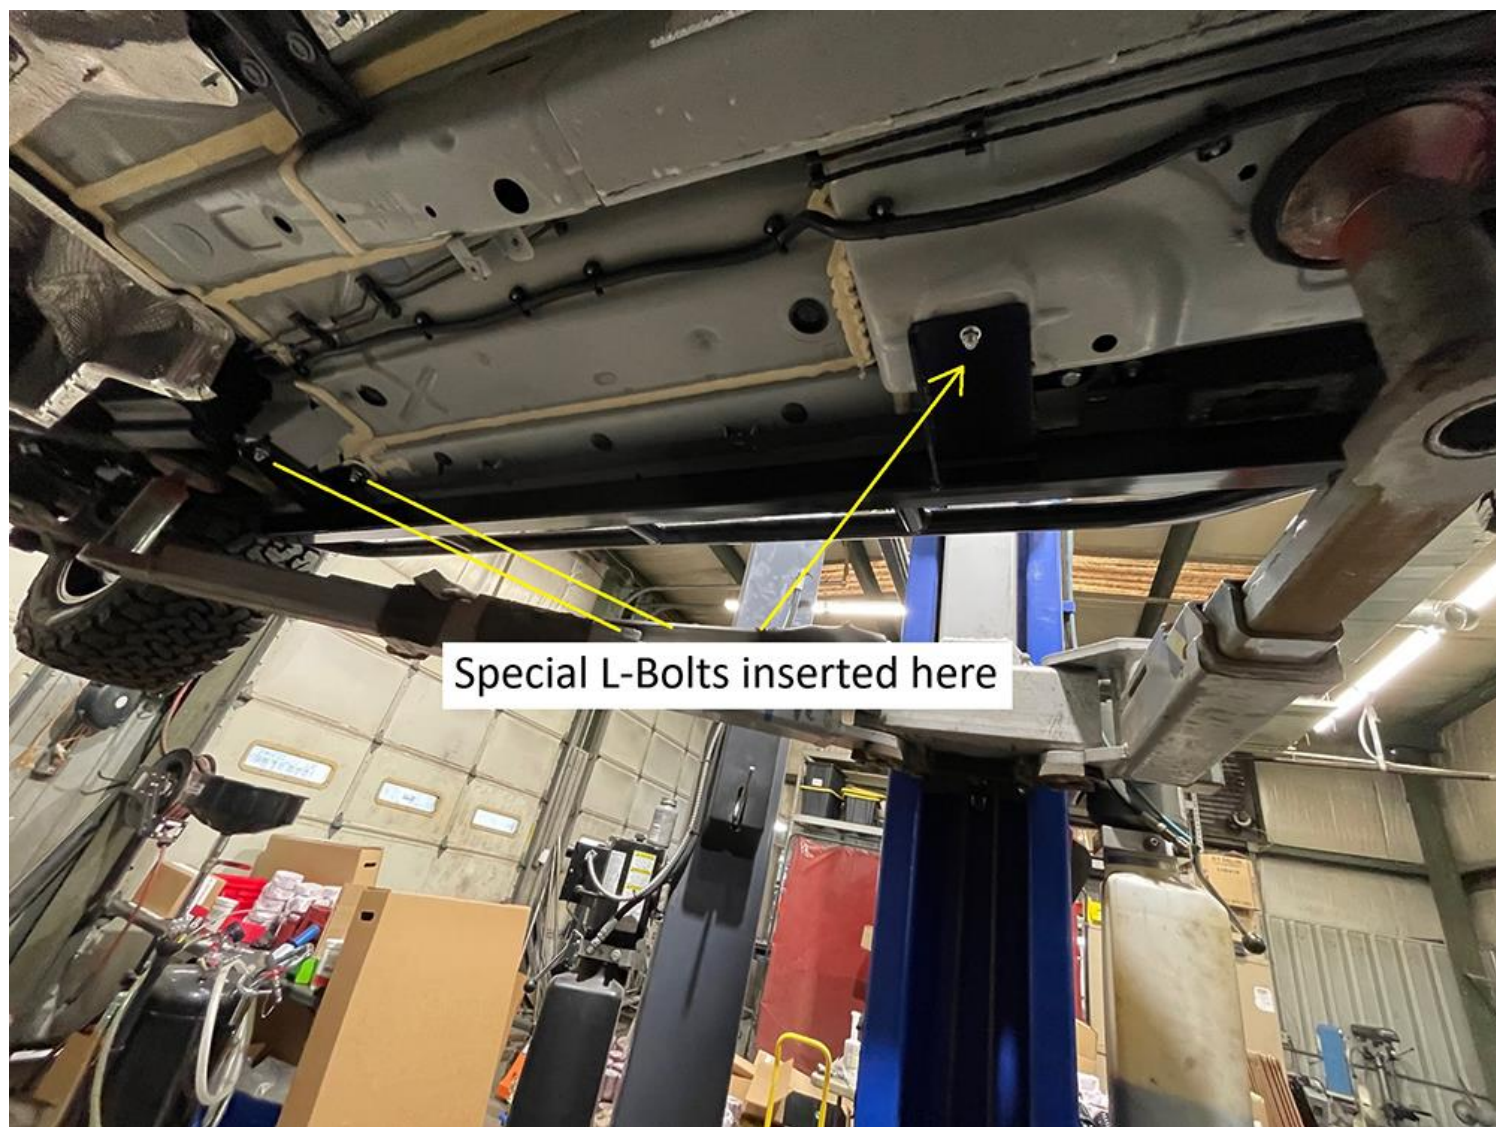

Front seen with the large nutsert installed. Also, L-bolt installed on the right side.





Nutsert tool not included but can be purchased on our website to make installation simple. Otherwise, it is a M12 nutsert tool.







Install serrated nuts on the L bolts with the slider in place.





Once L-Bolts are inserted and the nutsert is installed. You can install the sliders. The nutsert will receive the 1 M12 bolt and other spots will get the Flanged serrated nuts.





***IF YOU HAVE ANY QUESTIONS, COMMENTS, OR CONCERNS RELATED TO YOUR PRODUCT
PLEASE CONTACT US!***